



## STX TR-4050 REMOTE AFTERMARKET SHIFTER INSTALLATION INSTRUCTIONS

## TO INSTALL STX REMOTE SHIFTER ASSEMBLY:


- 1. Place shifter of the TR-4050 transmission in 3<sup>rd</sup> or 4<sup>th</sup> gear.
- 2. Remove the 4 bolts attaching the original stock shifter assembly to transmission.
- 3. Remove the shifter from the transmission.
- 4. Run a bead of RTV silicone around the shifter mounting surface of the TR-4050.
- 5. Install remote shifter assembly to transmission insert lower shifter stub into the shift dog.
- 6. Line up the shifter with the 4 bolt holes
- 7. Install bolts and torque to 11 ft-lbs (14Nm).

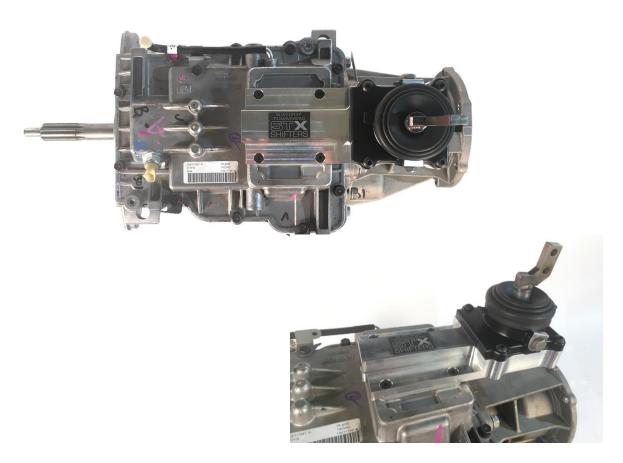


If you did not remember to put the transmission in 3<sup>rd</sup> or 4<sup>th</sup> gear before taking the shifter off, then follow the directions here;

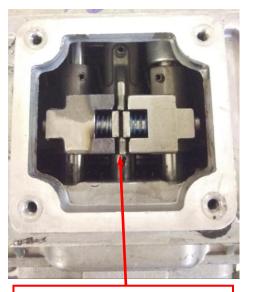

Locate the center shift rail

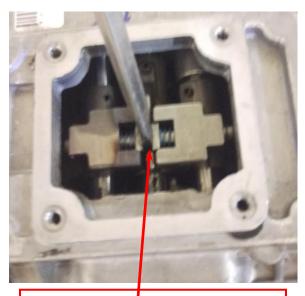

Insert a long flat blade screwdriver in between the outside rail interlocks

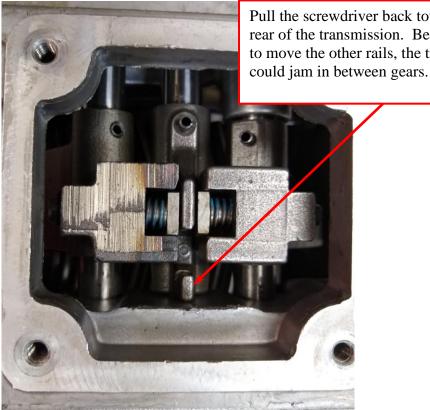

Continue with step 3 on the first page.

Pull the screwdriver back towards the rear of the transmission. Be careful not to move the other rails, the transmission